


ASSEMBLY INSTRUCTIONS

HIGH PRESSURE HOSES

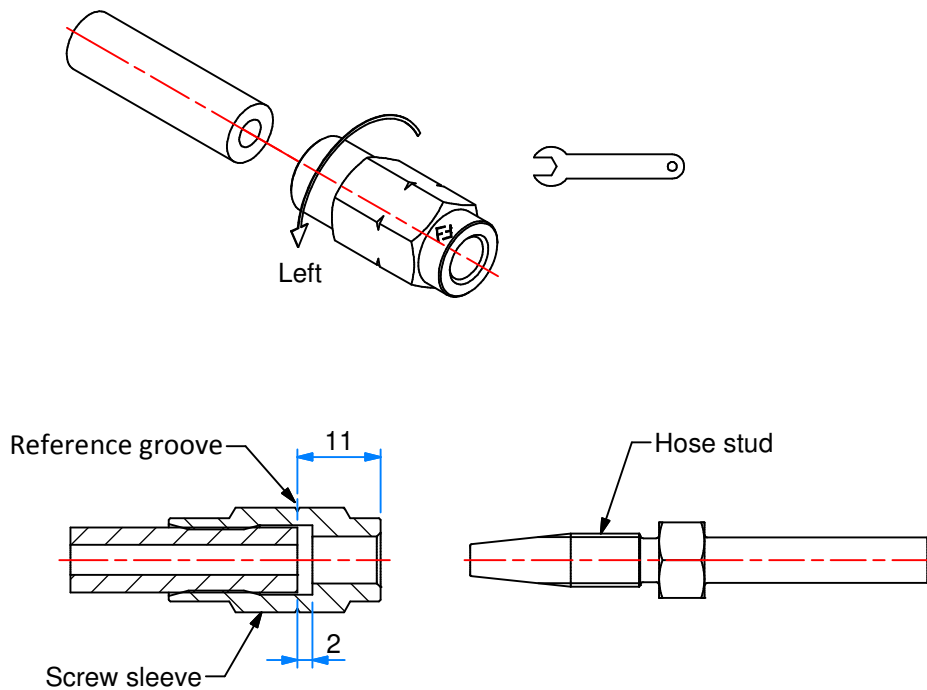


Assembly Instructions:

- Hold the hose firmly with gripper pliers.
- Lightly oil or grease the outer end of the hose stud.
- The external groove on the screw sleeve marks a depth of 11 mm and serves as a reference to ensure the hose is properly inserted to a depth of 11 mm.
- Turn the screw sleeve to the left onto the hose until it reaches a size of 11 mm.
- Securely screw the hose stud into the screw sleeve.

Caution:

Do not exceed or go below 11mm, as this may damage the hose and cause issues when pressurizing the system.

STANDARD:		MATERIAL:	DOC:
WEIGHT: [grams]	TITLE: Assembly Instructions for screw sleeves and hose studs		
DATE: 24-4-2025			
REV:	ART.:		
DRAWN: J.L.			
		DWG:	A4
		SCALE:	SHEET: